



# SILYNX

## MOLDABLE EAR RETAINERS FOR IN-EAR HEADSETS

- ▶ Easily and quickly molded by you to the exact shape of your ears.
- ▶ Re-moldable custom ear pieces. Simply re-heat and re-shape.
- ▶ Molded by you to the exact shape of your ears.
- ▶ They never hurt and they never fall out.

571.748.7152 | info@silynx.com

### WARNING!

The molding process involves heating your molds and forming them to your ears. **DO NOT PLACE THE HOT MOLD INTO YOUR EAR.** Wait until the mold is warm and pliable.

Excessive heat can deform the molds. Be careful not to leave earplugs in the car or any other place that would expose them to excessive heat. Molds **MAY** melt and can adhere to upholstery.

Improper fitting or misuse will reduce effectiveness of earplugs and could result in hearing loss or injury.



### MATERIALS NEEDED

- |                       |                      |
|-----------------------|----------------------|
| -Custom Ear Molds     | -Silynx Lynx Headset |
| -Boiling water        | -Metal spoon         |
| -Glass or ceramic cup | -Foam Ear Tips       |
| -Metal pan (stovetop) | -Mirror (optional)   |



### BEFORE MOLDING

The molding process is time sensitive. Read through these instructions before starting.

Clean ears thoroughly. Pull back hair and remove any jewelry that may interfere with the molding process.



### STEP 1

Remove the plastic insert.



### STEP 2

Using a microwave (glass/ceramic cup) or stovetop (metal pan), bring approx. 3 inches of water to a boil, remove from heat. Place **ONE** of the earplugs into the water and let sit for 5 minutes. **BE SURE TO ONLY PLACE ONE MOLD IN THE WATER AS MULTIPLE MOLDS WILL STICK TOGETHER.**




### STEP 3

Using a metal spoon, remove the mold from the water and let cool on spoon for 30 seconds. **CAUTION: ITEMS MAY BE VERY HOT.**



### STEP 4

Insert the Silynx ear bud through the mold, per the image below, and attach the foam tip to the ear stem. Be sure to match right mold to right ear bud and left mold to left ear bud.

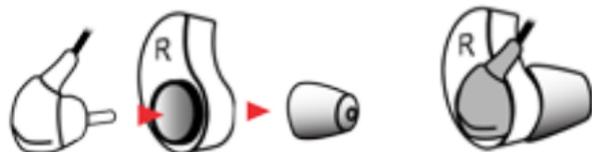

### STEP 5

While the mold is warm and pliable push the earplug into the ear with the tip of the mold pointing up and forward. R for right ear, L for left.

**CAUTION: DO NOT PLACE EARPLUG INTO EAR WHILE IT IS HOT. IT SHOULD BE WARM.**

Right:



Left:



Tip: Ensure earbud cable faces forward.



### STEP 6

Begin gently shaping the mold to your ear; the optional mirror can be used to help. Be sure to keep the mold within the concha, or bowl, of the ear near the ear canal. Shape until the mold fits your ear comfortably.



### STEP 7

When you are satisfied with your fit, allow the mold to rest in your ear for at least 5 minutes.

If you are not happy with the fit of your earplug simply remold by repeating steps 2 through 6.



### STEP 8

Repeat steps 1 through 6 with the remaining plug for your other ear.

**FOR MAXIMUM NOISE REDUCTION USE FOAM EAR TIPS.** Replacement foam tips can be purchased at [www.silynx.com](http://www.silynx.com).

### WARNINGS AND SAFETY INSTRUCTIONS

- Follow all instructions.
- Heed all warnings. Use only as directed.
- Regularly inspect tips for damage.
- Exposing Custom Molds to temperatures above 160° F will cause them to melt.
- Do not leave Custom Molds in direct sunlight for an extended period of time.
- Adult supervision required for children, components may be a choking hazard.
- Contact [customersupport@silynx.com](mailto:customersupport@silynx.com) with any questions.